PREMIER MOUNTS®
The original holding company™

INSTALLATION MANUAL

PSD-BW/PSD-BWL
Nesting Cart Series

NORTH AMERICA	EUROPE	AUSTRALIA,NEW ZEALAND, OCEANIA (Distributor)
3130 East Miraloma Avenue	Swallow House,	P.O. Box 295
Anaheim, CA 92806 USA	Shilton Industrial Estate,	Mordialloc Victoria 3195
USA and Canada –	Shilton, Coventry, England CV79JY	Australia
Phone: 800-368-9700	Phone: +44 (0) 2476 614700	Phone: 03 9586 6330
Fax: 800-832-4888	Fax: +44 (0) 2476 614710	www.premiermounts.com.au

Other Locations – Phone: 001.714.632.7100; Fax: 001.714.632.1044

©Premier Mounts 2008

9532-003-011-01

Table of Contents

WARRANTY ..... - 2 -
CONTACT PREMIER MOUNTS ..... - 2 -
WARNING STATEMENTS ..... - 3 -
PARTS LIST ..... - 4 -
INSTALLATION TOOLS ..... - 4 -
BW BASE CASTOR INSTALLATION (FIGURE 1) ..... - 5 -
SUPPORT TUBE INSTALLATION (FIGURE 2) ..... - 5 -
PSD-SPA INSTALLATION (FIGURE 3) ..... - 6 -
PSD-BW/L NESTING CART STORAGE (FIGURE 4) ..... - 6 -
OPTIONAL MOUNTING CONFIGURATIONS ..... - 7 -
TECHNICAL SPECIFICATIONS ..... - 8 -
NOTES ..... - 8 -

Warranty

Limited Lifetime Warranty

All Premier Mounts products carry a limited lifetime warranty from ship date against defects in materials and workmanship. Premier Mounts is not liable for improper installation that results in damage to mounts, adapters, display equipment or personal injury.

Contact Premier Mounts

In the event of missing and/or damage equipment, or technical questions, the following information can help in the completion of the installation.

Customer Service – (800) 368-9700
Technical Support – techsupport@mounts.com

Warning Statements

PREMIER MOUNTS DOES NOT WARRANT AGAINST DAMAGE CAUSED BY THE USE OF ANY PREMIER MOUNTS PRODUCT FOR PURPOSES OTHER THAN THOSE FOR WHICH IT WAS DESIGNED OR DAMAGE CAUSED BY UNAUTHORIZED ATTACHMENTS OR MODIFICATIONS, AND IS NOT RESPONSIBLE FOR ANY DAMAGES, CLAIMS, DEMANDS, SUITS, ACTIONS OR CAUSES OF ACTION OF WHATEVER KIND RESULTING FROM, ARISING OUT OF OR IN ANY MANNER RELATING TO ANY SUCH USE, ATTACHMENTS OR MODIFICATIONS.

THE FLOOR STRUCTURE MUST BE CAPABLE OF SUPPORTING AT LEAST 250 LBS. IF NOT, THE FLOOR STRUCTURE MUST BE REINFORCED. PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN, AS OUTLINED IN THE INSTALLATION INSTRUCTIONS, MUST BE ADHERED TO. FAILURE TO DO SO COULD RESULT IN SERIOUS PERSONAL INJURY, OR EVEN DEATH.

SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE ASSEMBLY OF THIS PRODUCT. USE PROPER SAFETY GEAR AND TOOLS FOR THE ASSEMBLY PROCEDURE TO PREVENT PERSONAL INJURY.

PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE ASSEMBLY INSTRUCTIONS SHOULD BE READ AND COMPLETELY UNDERSTOOD. THE ASSEMBLY INSTRUCTIONS MUST BE READ TO PREVENT PERSONAL INJURY AND PROPERTY DAMAGE. KEEP THESE ASSEMBLY INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION FOR FUTURE REFERENCE.

Indicates that the power plug is to be disconnected from the power outlet.

Contact Premier Mounts with any questions.

Safety precautions must be taken at all times.

Warning and Caution statements.

Do not install on a structure that is prone to vibration, movement or chance of impact. Failure to do so could result in damage to the plasma display and/or damage to the mounting surface.

Do not install near heater, fireplace, direct sunlight, air conditioning or any other source of direct heat energy. Failure to do so may result in damage to the display and could increase the risk of fire.

At least two qualified people should perform the assembly procedure. Injury and/or damage can result from dropping or mishandling the display.

DO NOT ATTACH EQUIPMENT WEIGHING MORE THAN 75LBS. ABOVE THE 60" MARKED LINE ON THE SUPPORT POLES. DOING SO MAY CAUSE THE NESTING CART TO TIP OVER, RESULTING IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY.

Parts List

Congratulations on purchasing the PSD-BW/PSD-BWL Nesting Cart. The PSD-BW/PSD-BWL Nesting Cart is shipped with all proper installation hardware and components. Please verify that none of these parts are missing and/or damaged before assembly. If there are parts missing and/or damaged, please stop the assembly and contact Premier Mounts (800) 368-7000.

NOTE

Some mounting configurations will allow for a "landscape" orientation. In these situations, when moving the PSD-BW/L Nesting Cart through a doorway, the orientation of the display must be returned to the "portrait" orientation. If not, maneuvering through the doorway could prove costly by damaging the display.

BW Base (Qty 1)

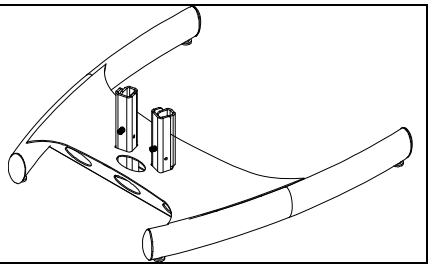

PSD-SPA (Qty 1)

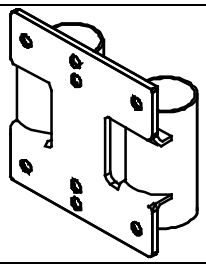

3" Castors (Qty 4)
(2 locking,
2 non-locking)

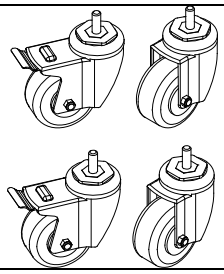

M8 x 10mm Set Screws (Qty 6)

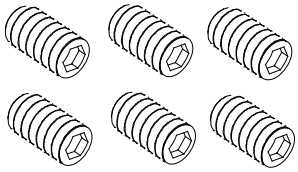

Support Tubes
(Qty 2)
NOTE: Length will vary depending on model purchased.

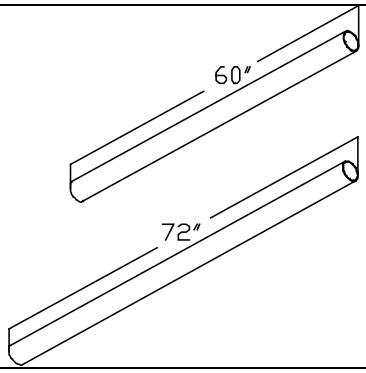

M10 Flat Washers
(Qty 4)

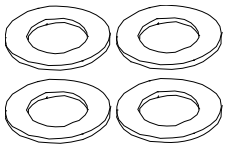

M10 x 12mm Hex Head Screws
(Qty 4)

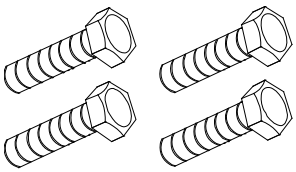

21mm Caster Wrench
(Qty 1)

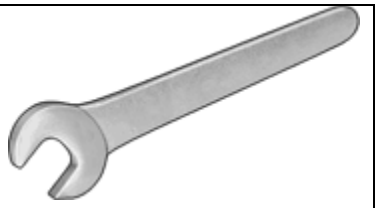

Installation Tools

Socket head wrench
M5 Allen Wrench (Supplied)

Soft Material/ Blanket
5/32" Allen Wrench (Supplied)

BW Base Castor Installation (Figure 1)

Unpack the PSD-BW/L Nesting Cart and review any WARNING statements that apply to the installation. Select the desired location for the PSD-BW/L Nesting Cart.

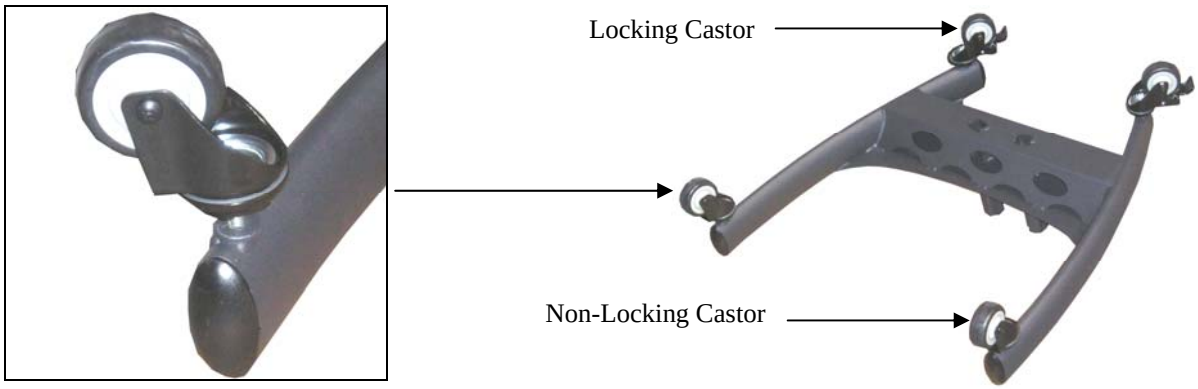

Figure 1

1. Place the BW/L on a flat surface.

NOTE Make sure the locking castors (Qty 2) are attached to the rear legs of the Nesting Cart.

2. Insert each castor into the threaded mounting point located on the underside of the BW/L base (Figure 1). Turn each castor clockwise to tighten. Make sure all four castors are tightened all the way until flush with the base. Tighten using the 21mm caster wrench (supplied).

Support Tube Installation (Figure 2)

1. Place the BW/L on a flat surface.
2. Take the support tubes and slide them over the mounting clamps that are located on the Nesting Cart.

NOTE To perform the following step, the access holes that are located at the end of the support tubes must line up with the set screw holes on the mounting clamps. The upper access holes will be used for cable management once the display has been mounted to the support tubes.

3. Insert the set screws into each hole and tighten using the supplied M5 Allen Wrench (Figure 2).

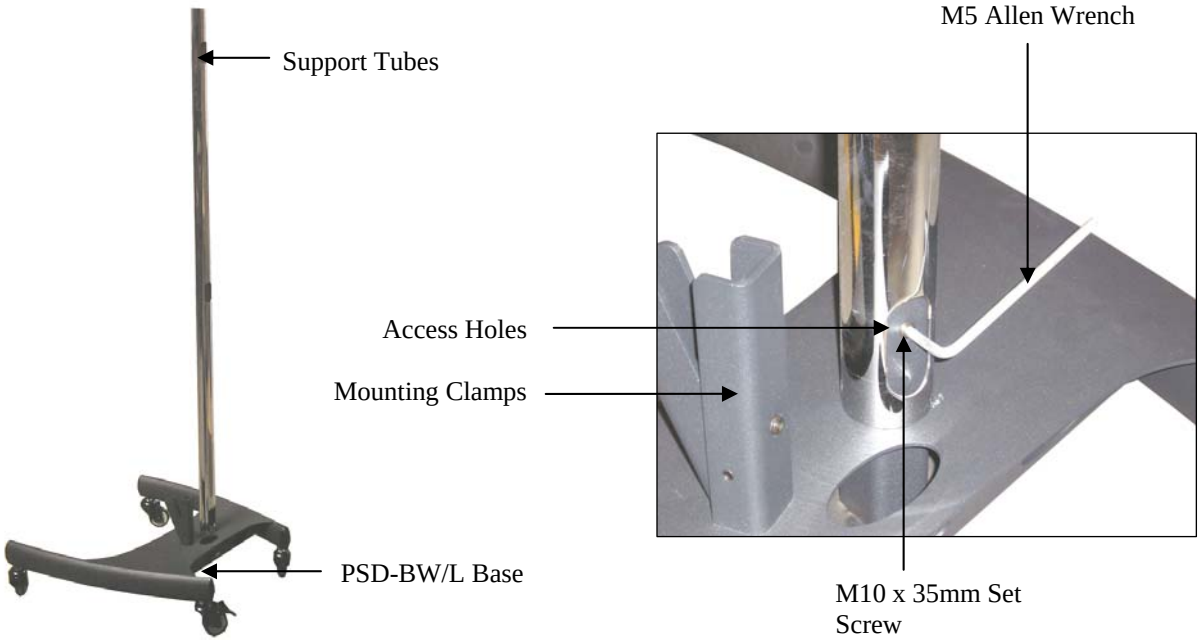

Figure 2

PSD-SPA Installation (Figure 3)

NOTE Use of the PSD-SPA will depend on the mount that is used. All PSM/CTM Series mounts require using the PSD-SPA. The Revolution Series, USA and UFA Mounts, however, do not require the use of the PSD-SPA.

1. Slide the PSD-SPA over and down the support tubes.
2. Once the desired height has been determined, tighten the four (4) M8 x 10mm set screws, using the 5/32" Allen wrench (supplied) to secure the PSD-SPA (Figure 3).

Figure 3

PSD-BW/L Nesting Cart Storage (Figure 4)

The PSD-BW/L is designed to maximize storage space. When storing multiple carts, slide the Nesting Carts together as close as possible.

NOTE Please adhere to any WARNING statements that will apply to the different mounting configurations the PSD-BW/L Nesting Cart will be used with.

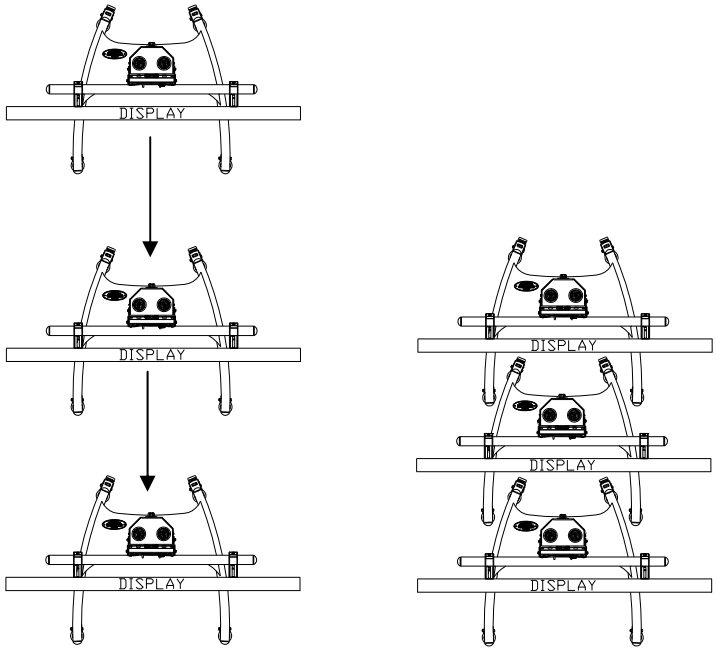

Figure 4

Optional Mounting Configurations

CTM-Series

Revolution Series

USA/UFA Series

Technical Specifications

All measurements are in inches (mm).

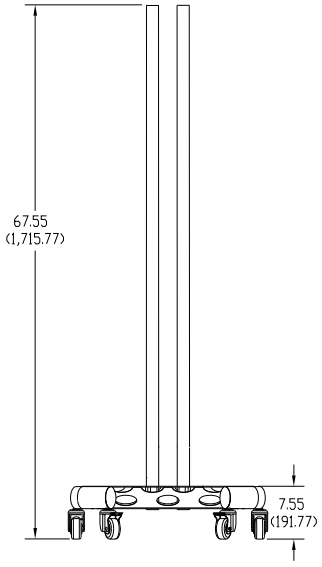

PSD-BW

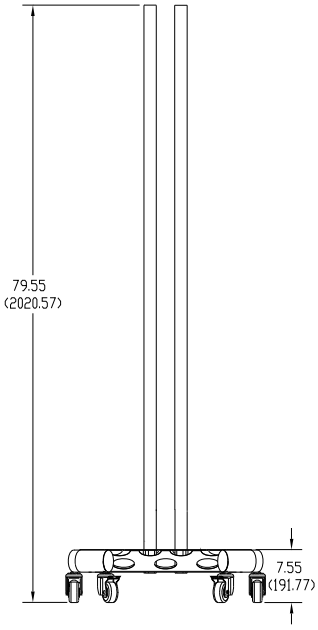

PSD-BWL

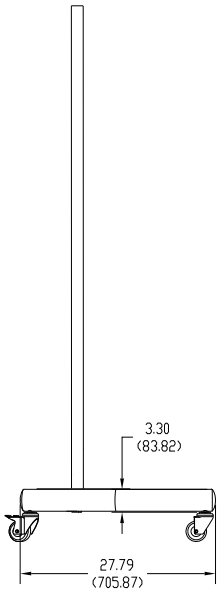

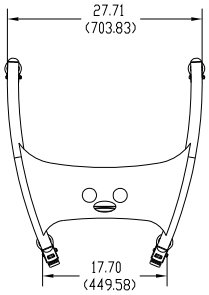

Notes

PREMIER MOUNTS®

CREATING POSITIVE CUSTOMER EXPERIENCES

INSTALLATION INSTRUCTIONS

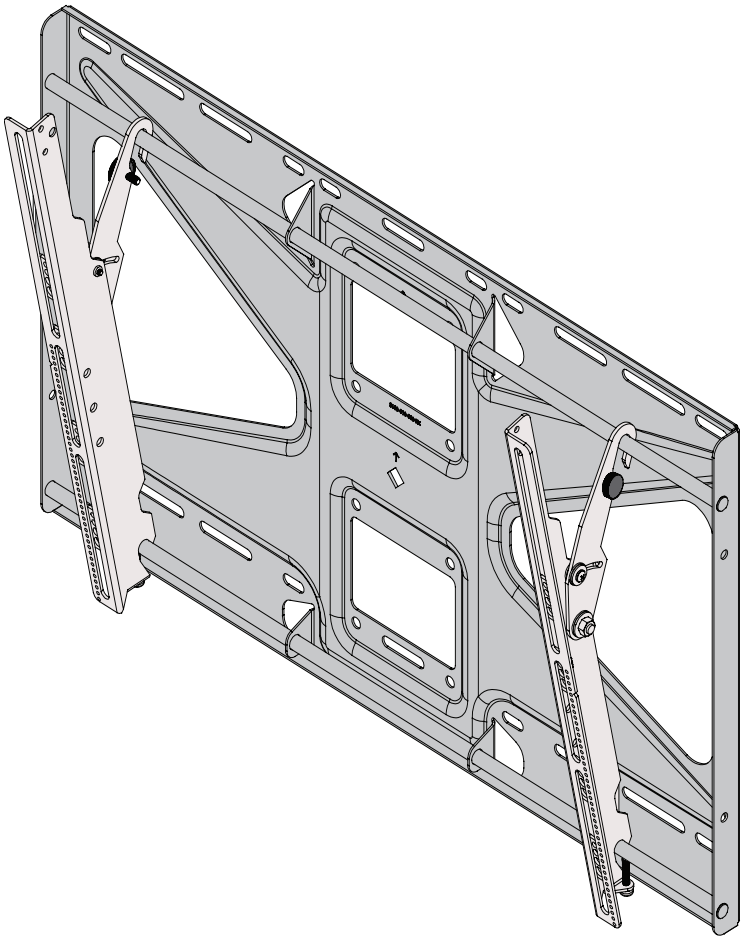

NORTH AMERICA

3130 East Miraloma Avenue
Anaheim, CA 92806 USA
USA and Canada
Phone: 1-800-368-9700
Fax: 1-800-832-4888
Other Locations
Phone: (001) 714-632-7100
Fax: (001) 714-632-1044

EUROPE

Unit 3, The Moorings Business Park,
Channel Way, Longford,
Coventry, CV6 6RH, UK
Phone: +44 (0) 24 7664 4105
Fax: +44 (0) 24 7664 4165

9531-000-311-08

c UL us LISTED

Contents

Weight Limit. 2
Warning Statements. 2
Installation Tools. 3
Parts List. 3
Mounting Hardware. 4
Nylon Spacers and Flat Washers. 4
Features. 5
Installing the Wall Plate. 6
- Introduction. 6

Installing the Mounting Brackets. 8
- Selecting the Mounting Hardware. 8
- Griplate™ Washer Installation. 9
- Nylon Spacer Installation. 9
- Attaching the Mounting Brackets to the Flat Panel. 10

Mounting the Flat Panel. 10
- Attaching the Flat Panel to the Wall Plate. 10
- Safety Knurl Knob Installation. 11
- Locking Safety Screw Installation. 11
- Tilt Adjustment. 11

Technical Specifications. 12
Warranty. 13

Weight Limit

Maximum Flat Panel Weight: 160 lbs.

THE WALL STRUCTURE MUST BE CAPABLE OF SUPPORTING AT LEAST FIVE TIMES THE WEIGHT OF THE FLAT PANEL. IF NOT, THE WALL STRUCTURE MUST BE REINFORCED.

Warning Statements

PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE INSTALLATION INSTRUCTIONS MUST BE READ AND COMPLETELY UNDERSTOOD. KEEP THESE INSTALLATION INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION FOR FUTURE REFERENCE.

STOP PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN MUST BE FOLLOWED, AS OUTLINED IN THESE INSTALLATION INSTRUCTIONS. FAILURE TO DO SO COULD RESULT IN PROPERTY DAMAGE, SERIOUS PERSONAL INJURY, OR EVEN DEATH.

STOP SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE ASSEMBLY OF THIS PRODUCT. USE PROPER SAFETY EQUIPMENT AND TOOLS FOR THE ASSEMBLY PROCEDURE TO PREVENT PERSONAL INJURY.

STOP PREMIER MOUNTS DOES NOT WARRANT AGAINST DAMAGE CAUSED BY THE USE OF ANY PREMIER MOUNTS PRODUCT FOR PURPOSES OTHER THAN THOSE FOR WHICH IT WAS DESIGNED OR DAMAGE CAUSED BY UNAUTHORIZED ATTACHMENTS OR MODIFICATIONS, AND IS NOT RESPONSIBLE FOR ANY DAMAGES, CLAIMS, DEMANDS, SUITS, ACTIONS OR CAUSES OF ACTION OF WHATEVER KIND RESULTING FROM, ARISING OUT OF OR IN ANY MANNER RELATING TO ANY SUCH USE, ATTACHMENTS OR MODIFICATIONS.

At least two qualified people should perform the assembly procedure. Personal injury and/or property damage can result from dropping or mishandling the flat panel.

If mounting to wall studs or ceiling studs, make sure that the mounting screws are anchored into the center of the wall studs or ceiling studs. Use of an edge-to-edge stud finder is recommended.

It is recommended that a maximum of ⅝″ plaster board be used when mounting to wooden studs.

Be aware of the mounting environment. If drilling and/or cutting into the mounting surface, always make sure that there are no electrical wires in wall. Cutting or drilling into an electrical line may cause serious personal injury.

Make sure there are no water or natural gas lines inside the wall where the mount is to be located. Cutting or drilling into a water or gas line may cause severe property damage or personal injury.

This product is intended for indoor use only. Use of this product outdoors could lead to product failure and/or serious personal injury.

Do not install near sources of high heat. Do not install on a structure that is prone to vibration, movement or chance of impact.

Contact Premier Mounts with any questions:
(800) 368-9700
techsupport@mounts.com

Installation Tools

The following tools may be required, dependent upon your particular installation. These tools are not provided by Premier Mounts, but you can purchase them at your local hardware store.

Electronic Stud Finder

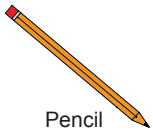
Pencil


Protective Eyewear

Portable Drill

¼″ Drill Bit


Socket Wrench

½″ Socket


Phillips Head Screwdriver

Parts List

Your Premier Mounts product is shipped with all proper installation hardware and components. Make sure that none of these parts are missing and/or damaged before beginning installation. If there are parts missing and/or damaged, please stop the installation and contact Premier Mounts at 1-800-368-9700.

CTM-MS2 Tilting Wall Mount Assembly Components

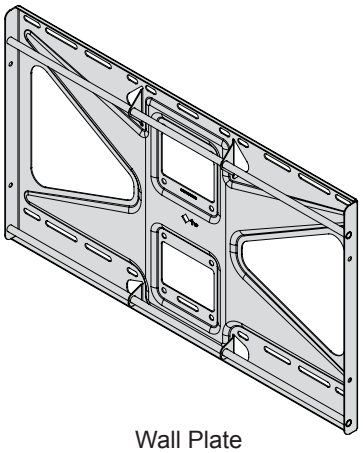
Wall Plate
(Qty 1)

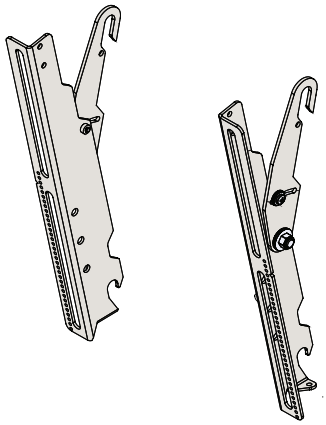
Mounting Bracket
(Qty 2)

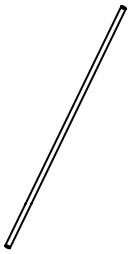
Thread Depth Indicator
(Supplied)

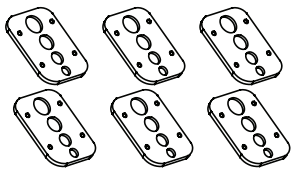
Griplate™ Washer
(Qty 6)


M6 Safety Knurl Knob
(Qty 2)


Universal Spacers
(Qty 24)

Panelock™ Hardware Kit

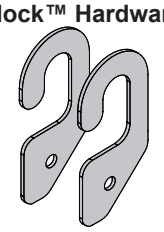
Panelock™ Hooks (Qty 2)


M6 x 12mm Security Head Screw (Qty 2)

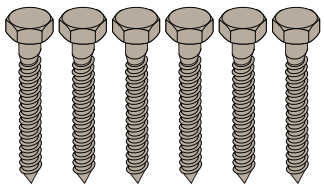
5/16″ x 3″ Lag Bolt
(Wooden Studs Only) (Qty 6)

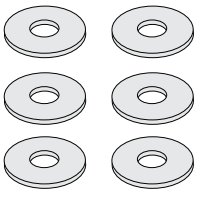
5/16″ Flat Washer
(Qty 6)

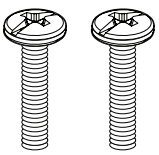
M6 x 30mm Locking Safety Screw (Qty 2)

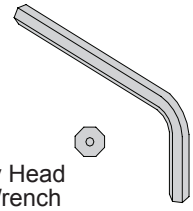
Security Head Allen Wrench

Parts List (cont'd)

Mounting Hardware	
M4 x 16mm Screw (Qty 6)	
M4 x 25mm Screw (Qty 6)	
M4 x 30mm Screw (Qty 6)	
M5 x 16mm Screw (Qty 6)	
M5 x 25mm Screw (Qty 6)	
M5 x 30mm Screw (Qty 6)	
M6 x 16mm Screw (Qty 6)	
M6 x 25mm Screw (Qty 6)	
M6 x 30mm Screw (Qty 6)	
M6 x 45mm Screw (Qty 6)	
M8 x 16mm Screw (Qty 6)	
M8 x 25mm Screw (Qty 6)	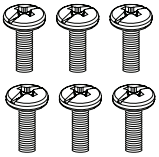
M8 x 30mm Screw (Qty 6)	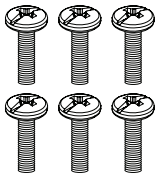
M8 x 45mm Screw (Qty 6)	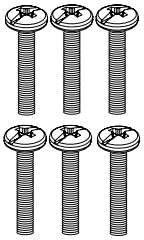
M8 x 70mm Screw (Qty 4)	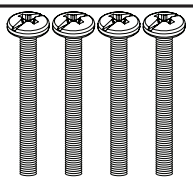

Features

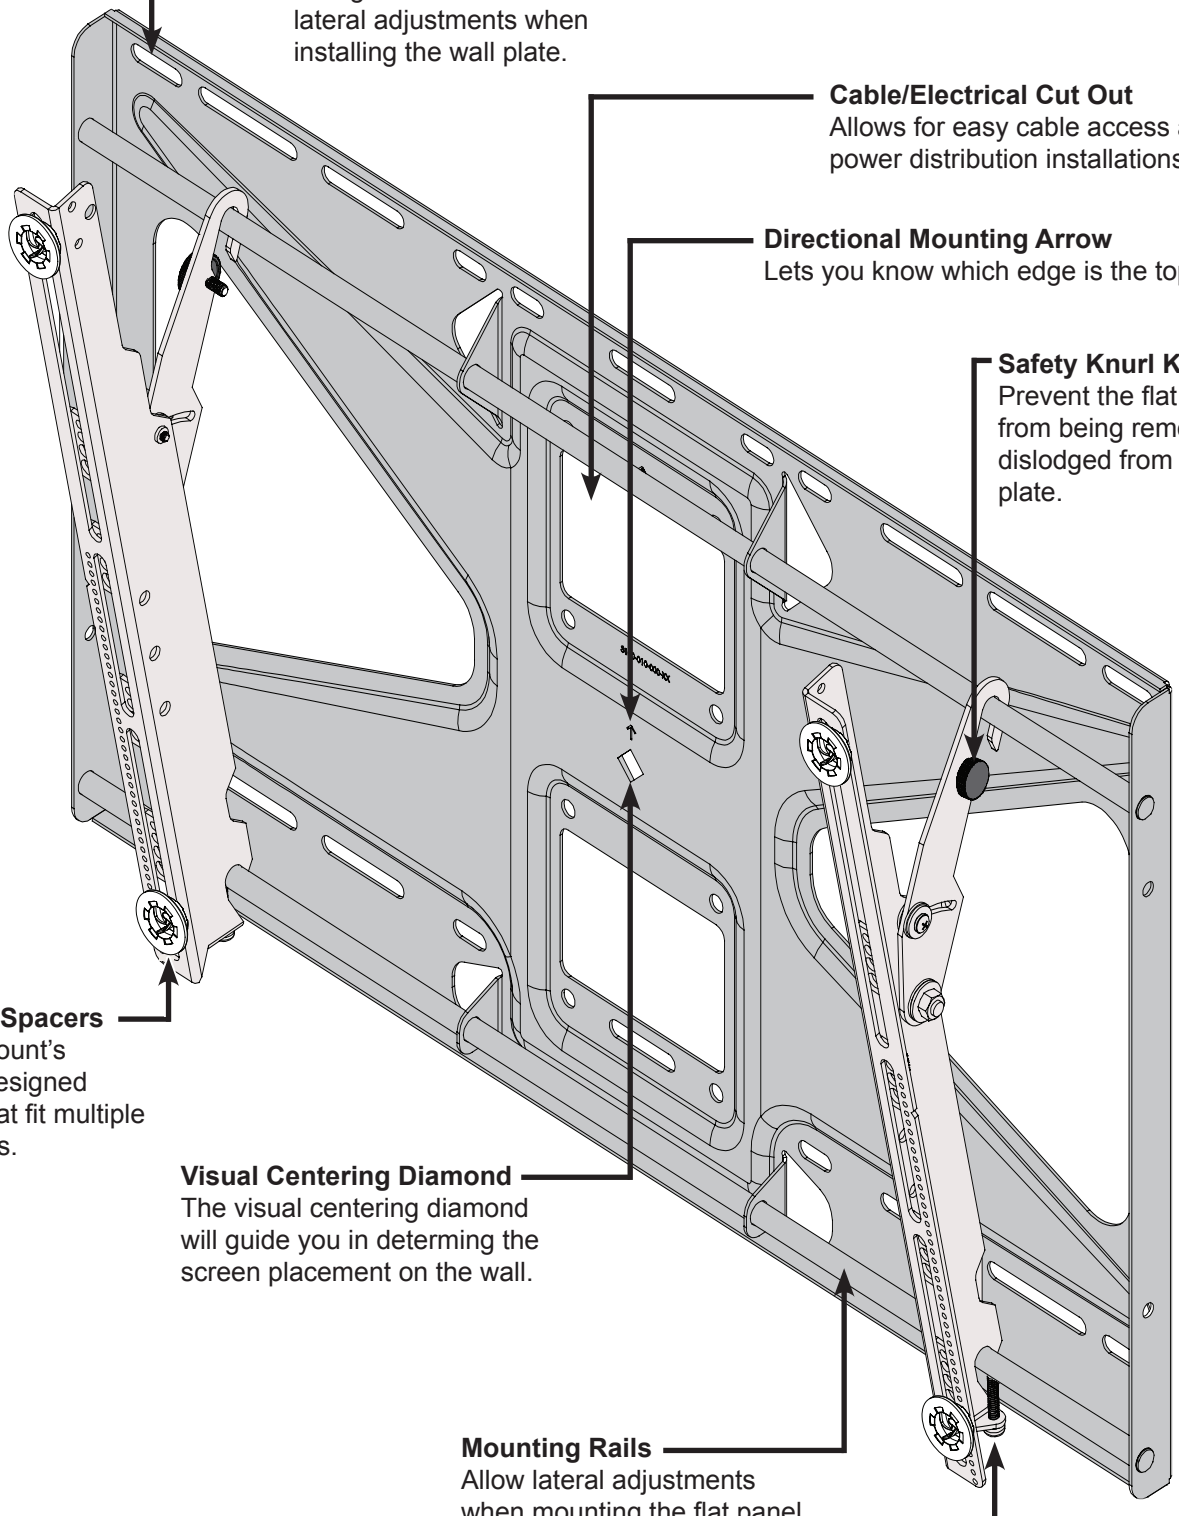

Mounting Slots
Allow for a variety of stud configurations and lateral adjustments when installing the wall plate.

Cable/Electrical Cut Out
Allows for easy cable access and power distribution installations.

Directional Mounting Arrow
Lets you know which edge is the top.

Safety Knurl Knobs
Prevent the flat panel from being removed or dislodged from the wall plate.

Universal Spacers
Premier Mount's uniquely designed spacers that fit multiple screw sizes.

Visual Centering Diamond
The visual centering diamond will guide you in determing the screen placement on the wall.

Mounting Rails
Allow lateral adjustments when mounting the flat panel.

Locking Safety Screws
Prevent the flat panel from being removed or dislodged from the wall plate.

Installing the Wall Plate

Introduction

Directional Mounting Arrow
The Directional Mounting Arrow stamped into the CTM-MS2 wall plate indicates which edge is the top.

Visual Centering Diamond
The Visual Centering Diamond will guide you in determing the screen placement on the wall.

Mounting Safety
Two people are recommended to install the wall plate.

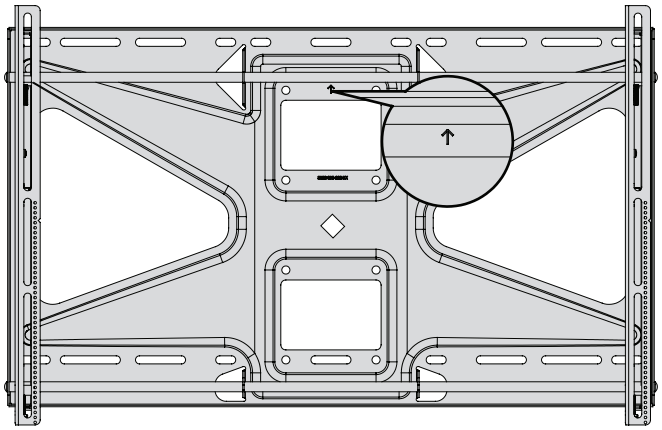

Step 1

You must secure the wall plate to two (2) wall studs with six (6) lag bolts (3 lag bolts for each stud found).

1. Use a stud finder to determine the exact center of wall studs in the vicinity of the wall plate.
2. Use a pencil to mark the exact center of each of the wall studs.

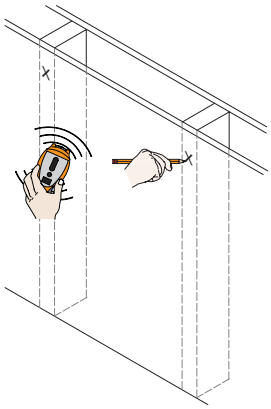

Step 2

Two people are recommended for this step; one person to level the wall plate and another person to mark the wall stud location.

1. Place the wall plate against the wall in the desired viewing location.
2. Adjust the wall plate to align the mount slots in the wall plate with the center of the wall studs.
3. Level the wall plate.
4. Use a pencil to mark the upper right mounting location along the center of the wall stud.

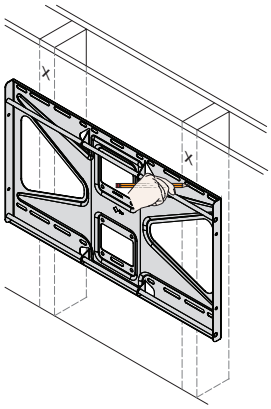

Step 3

Drill a “pilot hole” in the center of the upper right mark using a ¼″ drill bit and power drill.

Only use a ¼″ drill bit when drilling pilot holes.

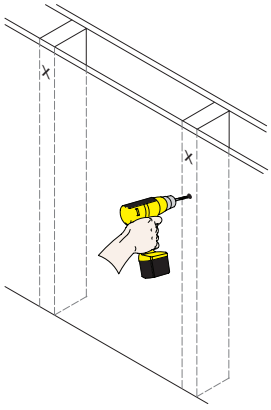

Installing the Wall Plate (cont'd)

Step 4

1. Place the wall plate against the wall and align it with the pilot hole.
2. Insert one (1) 5/16″ x 3″ lag bolt and one (1) 5/16″ washer into the upper right pilot hole.
3. Use a socket wrench and a ½″ socket to tighten the lag bolt.

⚠ Do not overtighten the lag bolt.

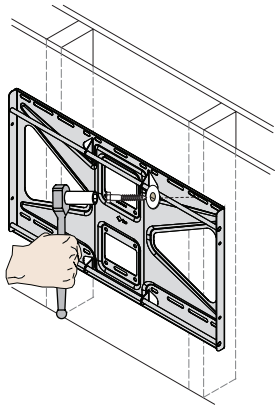

Step 5

1. Level the wall plate.
2. Use a pencil to mark the remaining five (5) mounting locations along the center of each wall stud.

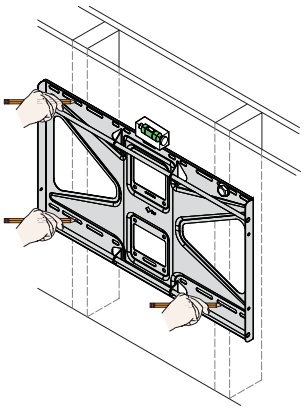

Step 6

⚠ Two people are recommended for this step; one person to level the wall plate and another person to drill the pilot holes.

Drill a "pilot hole" in the center of each of the marks with a power drill and a ¼″ drill bit.

⚠ Only use ¼″ drill bit when drilling the pilot holes.

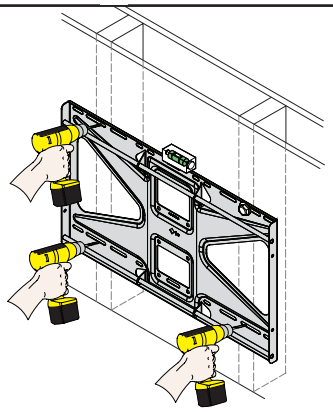

Step 7

1. Insert one (1) 5/16″ x 3″ lag bolt and one (1) 5/16″ washer into each pilot hole
2. Tighten all lag bolts using a socket wrench and ½″ socket.

⚠ Do not overtighten the lag bolts when attaching the mount to the wall. Improper installation may result in personal injury or property damage.

Proceed to the "Installing the Mounting Bracket" on page 8.

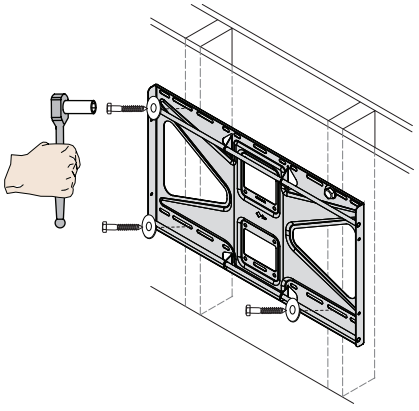

Installing the Mounting Brackets

Selecting the Mounting Hardware

1. Insert a small straw or toothpick into the threaded inserts found on the back of the flat panel.
2. Use a pencil to mark the depth of the threaded insert on the small straw or toothpick.
3. Mark the straw or toothpick 1/8” above the depth of the threaded insert, as shown in Figure 1.
4. Insert the small straw or toothpick into the remaining threaded inserts to compare and verify their depth using the straw or toothpick’s 1/8” allowance mark.
5. Locate the correct diameter screw for the threaded insert.

If the screw you selected is longer than the 1/8” allowance mark on the small straw or toothpick, as shown in Figure 2 and Figure 3, do not use this screw. The screw length must not bypass the mark.

6. Test each size of the screws provided.

   The correct screws should thread easily into the mounting point and not pull out when tension is applied.

Proceed to the “Griplate™ Installation” section.

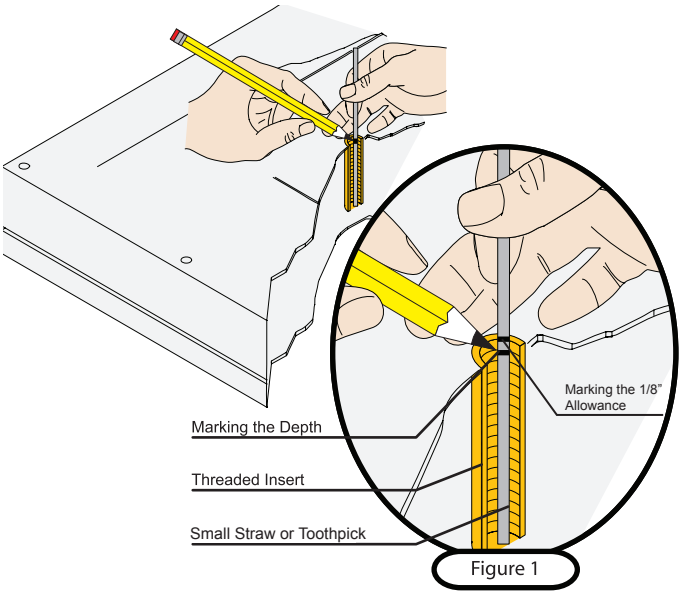

Figure 1

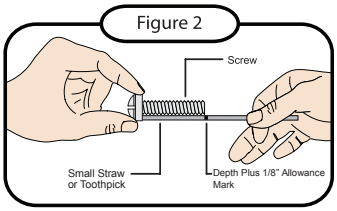

Figure 2

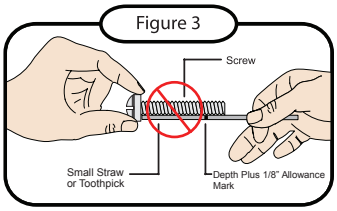

Figure 3

Installing the Mounting Brackets (cont'd)

Griplate™ Installation

Premier Mounts' Universal Washers are designed to accommodate the various M4, M5, M6 and M8 hole sizes required by flat panels.

Do not place excessive pressure on the back of the flat panel, as this may damage the flat panel.

The Universal Washer must be installed between the head of the mounting screw and the mounting bracket as shown.

Does the flat panel have:

- Recessed mount points?
- Uneven mount points?
- A curved back?
- Any obstruction near the mount point?

If **Yes**, you must install Universal Spacers. Remove the mounting brackets, Universal Washers, and mounting screws from the back of the flat panel. **Proceed to the "Universal Spacer Installation" below**.

If **No**, **skip to the "Attaching the Mounting Bracket to the Flat Panel" on page 10**.

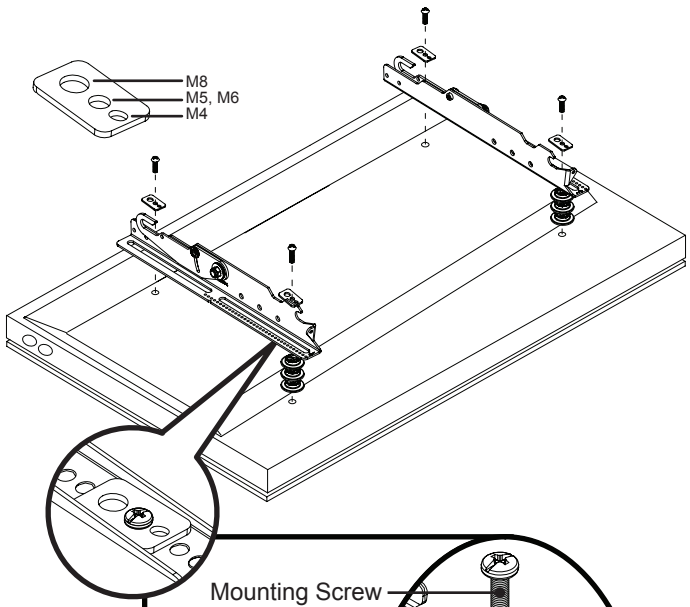

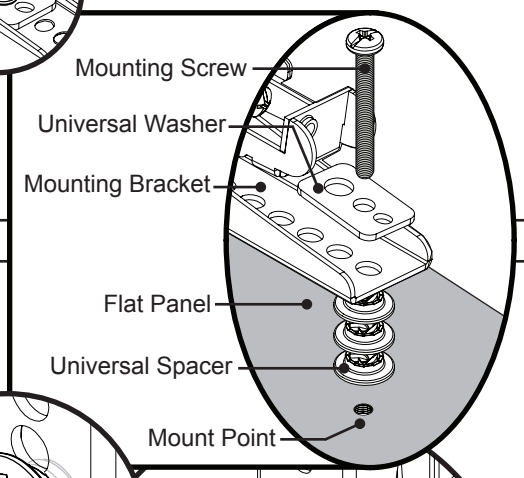

Universal Spacer Installation

Premier Mounts' Universal Spacers allow you to attach the mounting bracket to flat panels which have recessed or uneven mount points. Each Universal Spacer adds ¼″ to the distance between the mounting bracket and the flat panel.

The Universal Spacers must be stacked and oriented as shown.

The Universal Spacers must only be installed between the mounting bracket and the flat panel.

The Universal Spacers will fit M4, M5, M6 and M8 screw sizes.

Proceed to the **"Attaching the Mounting Bracket to the Flat Panel"** section.

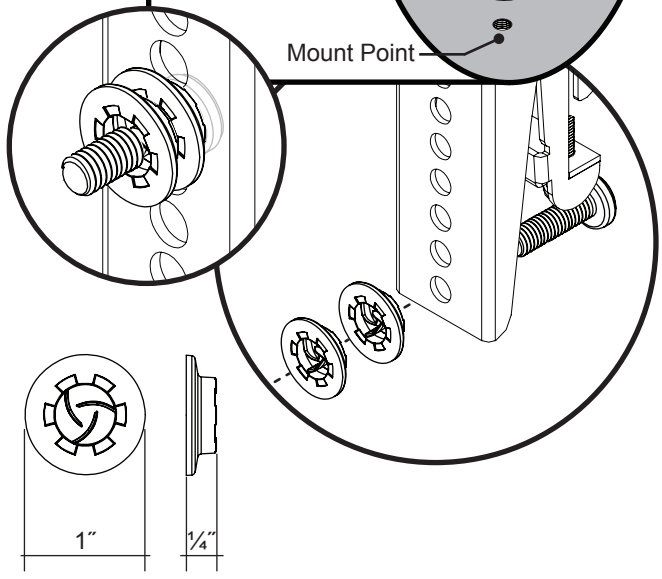

Installing the Mounting Brackets (cont'd)

Attaching the Mounting Brackets to the Flat Panel

This section presumes that you have read and understood these sections:

- Selecting the Proper Mounting Hardware
- Universal Washer Installation
- Universal Spacer Installation

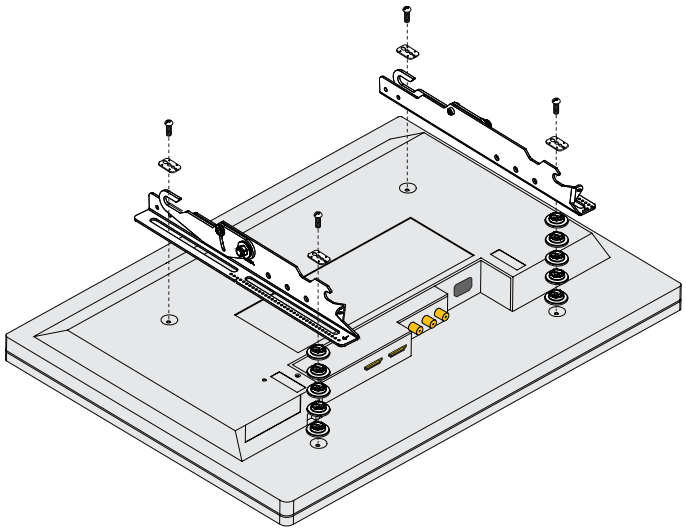

1. Place your flat panel screen-side down on a soft, flat surface.
2. Identify the number and location of the thread inserts on the back of your flat panel.
3. Aligning the holes on each mounting bracket with the thread inserts on the back of your flat panel.
4. Secure each mounting bracket to your flat panel by inserting a minimum of two (2) screws per bracket.

Do not overtighten the mounting hardware.

Proceed to the "Mounting the Flat Panel" below.

Mounting the Flat Panel

Attaching the Flat Panel to the Wall Plate

This section requires two people.

Do not release your flat panel until you are certain that top and bottom hooks of both mounting brackets are securely seated on the upper and lower mounting rails of the wall panel.

1. Raise the flat panel past the top and bottom mounting rails on the wall panel.
2. Slide the flat panel down slowly, keeping it close to the wall.
3. Engage the top and bottom mounting brackets to the rails of the wall plate.

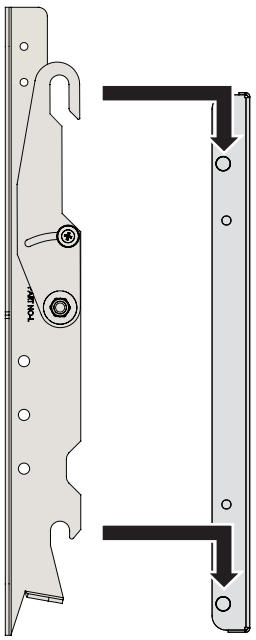

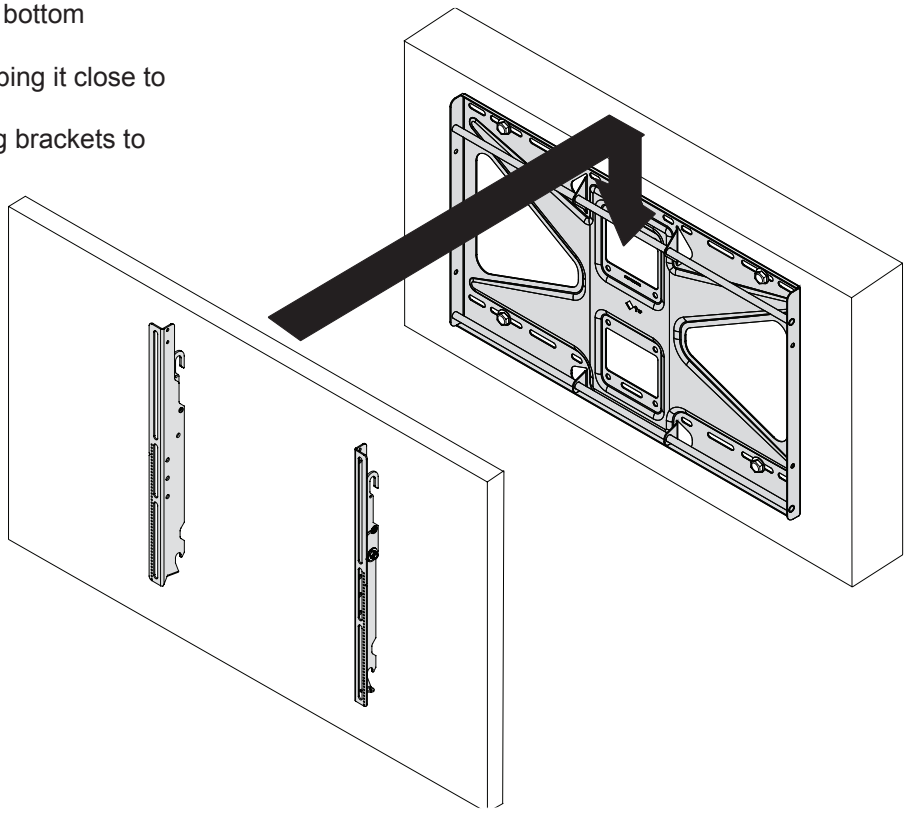

Safety Knurl Knob Installation

If you chose not to install the safety knurl knobs and instead chose to use the Panelock™, skip this section and proceed to the Panelock™ Installation section below.

The Panelock™ is a theft deterent device. It comes with security hardware that requires a special tool that is used to install and remove the security head screws.

The safety knurl knobs keep the flat panel from being accidently dislodged from the CTM-MS2.

1. Fully extend the flat panel away from the wall.
2. Install and tighten a safety knurl knob at the top of one of the mounting brackets.
3. Repeat steps 1 and 2 for the other safety knurl knob.

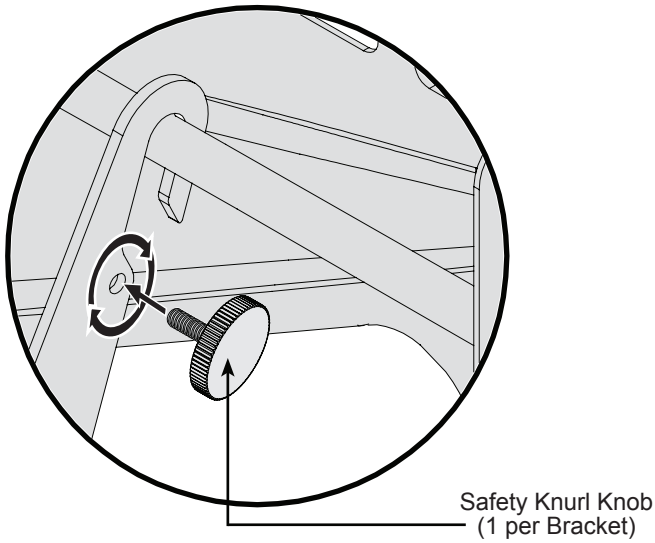

Panelock™ Installation

If the safety knurl knobs were previously installed, they must be removed prior to installing the Panelock™ hardware.

1. Slide the Panelock™ onto the top mounting rail, placing the Panelock™ to the outside edge of the flat panel bracket.

Be sure that the Panelock™ is facing in the same direction as shown in the illustration to the right.

2. Insert and tighten one (1) M6 x 12mm screw to attach the Panelock™ to the flat panel bracket.

Repeat 1 and 2 to attach the remaining Panelock™.

Proceed to "Tilt Adjustment" on page 12.

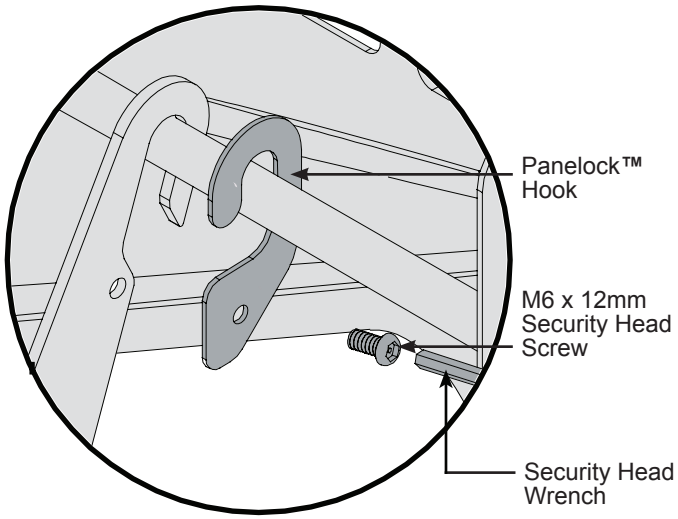

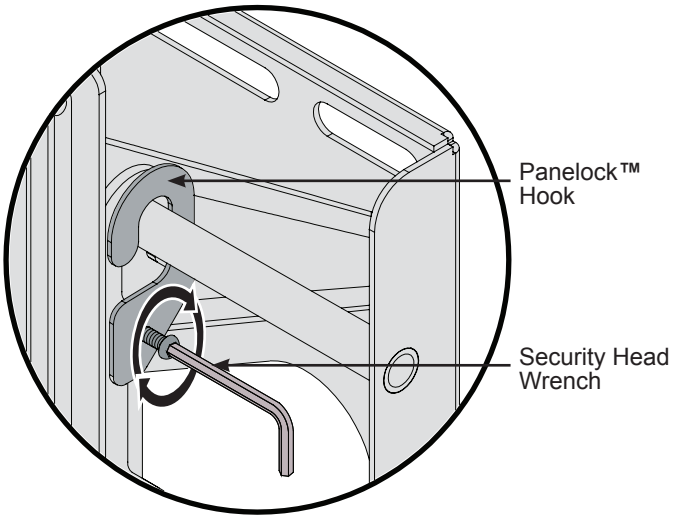

Locking Safety Screw Installation

The locking safety screws keep the flat panel from being accidently dislodged from the CTM-MS2.

1. Thread an M6 x 30mm locking safety screw at the bottom of one of the mounting brackets.
2. Use a Phillips head screwdriver to tighten the locking safety screw.
3. Repeat steps 1 and 2 for the other locking safety screw.

Do not overtighten the locking safety screws.

Proceed to the "Installing the Mounting Bracket" below.

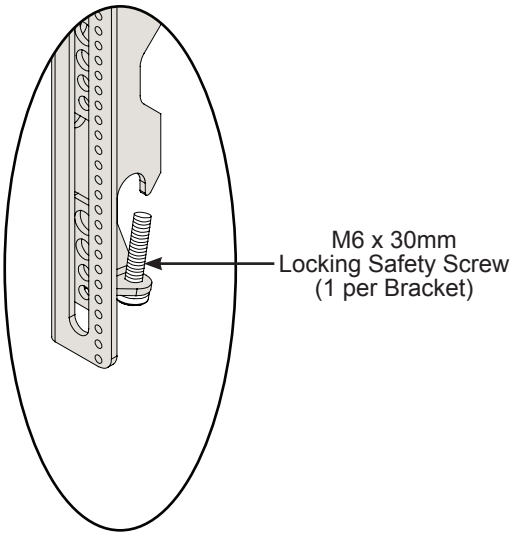

Tilt Adjustment

Adjusting the Flat Panel Friction Tilt Angle

1. Place one hand at the center top edge of the flat panel.
2. Place the other hand on the center bottom edge of the flat panel.
3. Using the upper hand, gently pull the top of the flat panel towards you while the lower hand gently pushes the bottom of the flat panel away from you.

Adjusting the Flat Panel to the Original Position

1. Place one hand at the center top edge of the flat panel.
2. Place the other hand on the center bottom edge of the flat panel.
3. Using the upper hand, gently push the top of the flat panel towards the wall while the lower hand gently pulls the bottom of the flat panel away from the wall.

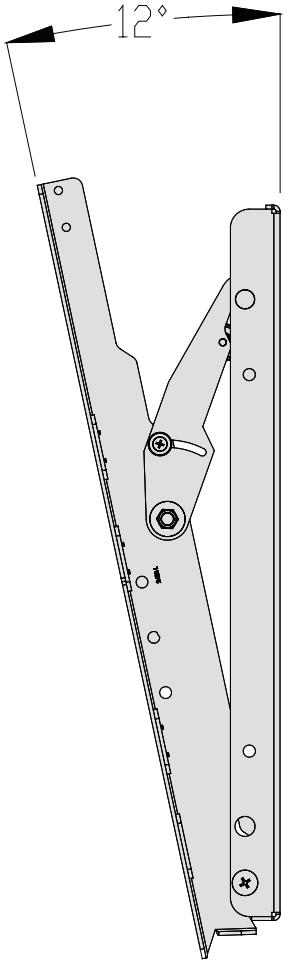

Technical Specifications

All measurements are in inches [millimeters].



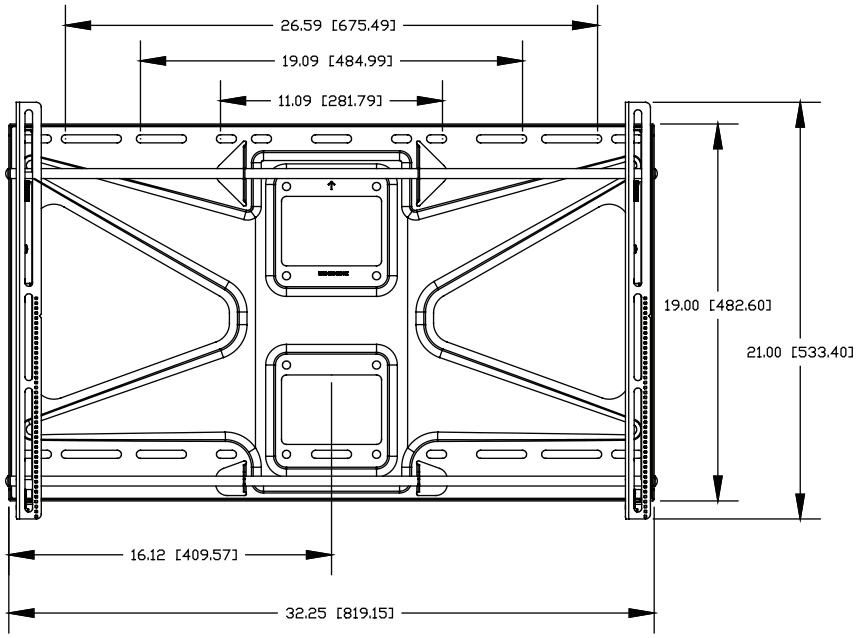

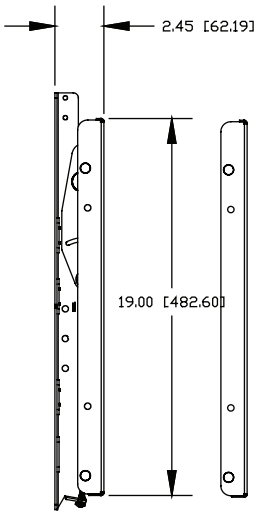

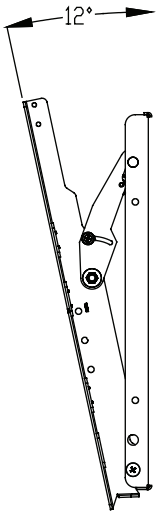

Warranty

PREMIER MOUNTS
LIMITED LIFETIME WARRANTY

What and Who is Covered by this Limited Warranty and for How Long
Premier Mounts warrants this product to be free from defects in material and workmanship for the lifetime of the original owner of this product. The limited warranty is valid only for the original purchaser of the product.

What Premier Mounts Will Do
At the sole option of Premier Mounts, Premier Mounts will repair or replace any product or product part that is defective. If Premier Mounts chooses to replace a defective product or part, a replacement product or part will be shipped to you at no charge, but you must pay any labor costs.

What is Not Covered; Limitations
PREMIER MOUNTS DISCLAIMS ANY LIABILITY FOR DAMAGE TO MOUNTS, ADAPTERS, DISPLAYS, PROJECTORS, OTHER PROPERTY, OR PERSONAL INJURY RESULTING, IN WHOLE OR IN PART, FROM IMPROPER INSTALLATION, MODIFICATION, USE OR MISUSE OF ITS PRODUCTS.

PREMIER MOUNTS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. PREMIER MOUNTS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, INABILITY TO USE ITS PRODUCTS OR LABOR COSTS FOR REMOVING AND REPLACING DEFECTIVE PRODUCTS OR PARTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

What Customers Must Do for Limited Warranty Service
If you discover a problem that you think may be covered by the warranty you MUST REPORT it in writing to the address below within thirty (30) days. Proof of purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchaser's name, address, and telephone number. General inquiries can be addressed to Premier Mounts Customer Service at 1-800-368-9700. Warranty claims will not be accepted over the phone or by fax.

Premier Mounts
Attn: Warranty Claim
3130 East Miraloma Ave.
Anaheim, CA 92806

How State Law Applies
THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

Disclaimer

Premier Mounts intends to make this manual accurate and complete. However, Premier Mounts makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Premier Mounts makes no representation of warranty, expressed or implied, regarding the information contained herein. Premier Mounts assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

©Premier Mounts 2011